



**Unlimited  
Sports  
Solutions**

*Designed for safety. Built for fun.*

[www.unlimitedsportssolutions.com](http://www.unlimitedsportssolutions.com)


531-207-9331

[sales@unlimitedsportssolutions.com](mailto:sales@unlimitedsportssolutions.com)

# How to Measure for Windscreen

## Materials needed:

- Pad (preferably with a grid)
- Pencil/Pen
- 100' or 300' tape measure
- 25' tape measure (for height)

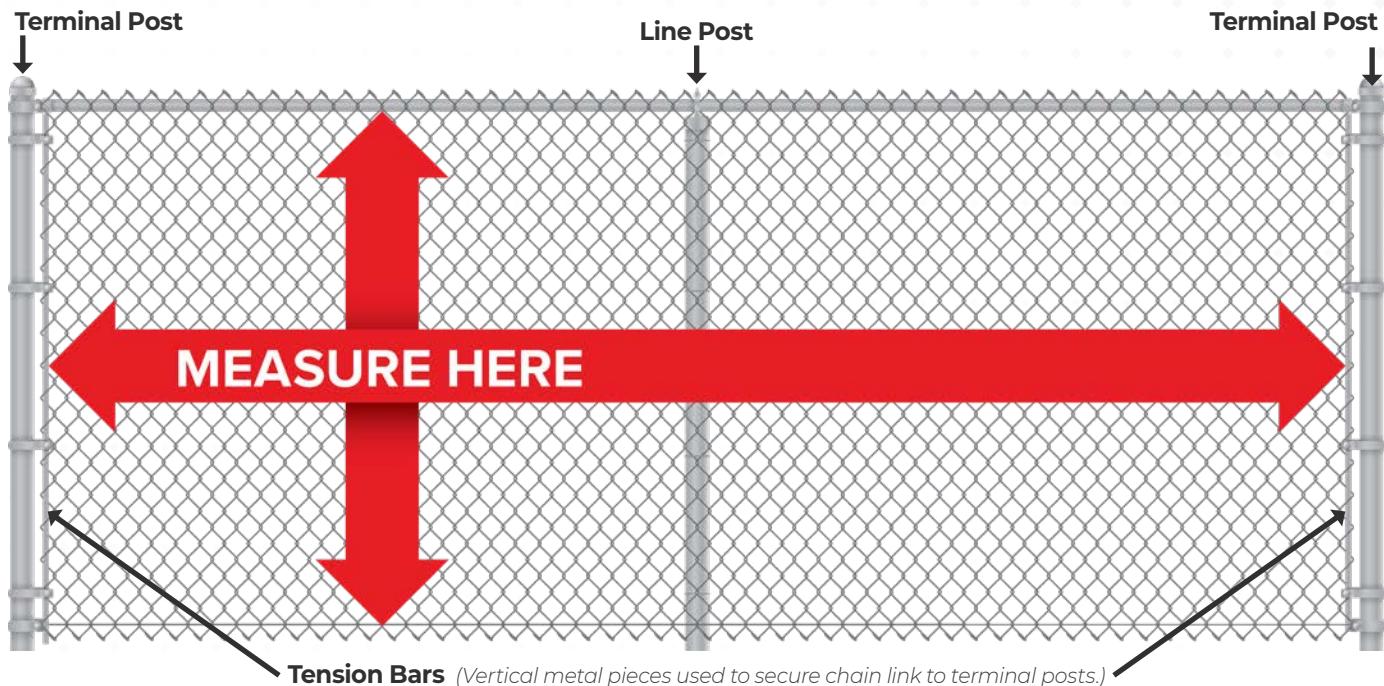

### STEP 1

Draw layout of the site and include a landmark. Example: NW corner or starting at build etc.

### STEP 2

Measure height of fence and notate on layout. Check height in multiple locations and use lowest height measurement.

### STEP 3

Measure each section of fence from outside tension bar to outside tension bar.

**IMPORTANT: for sections under 20' deduct 2" from measurement; for sections over 20' deduct 3"** and add this measurement. Each panel should not exceed 50'; round down to nearest half inch as needed.

### STEP 4

Repeat same process for measuring gates. Check the height and measure outside tension bar to outside tension bar and deduct 2"

### STEP 5

Assign each section a unique number on diagram; Your panels will be labeled with these numbers for easy identification.  
(Optional but recommended)

## Windscreen Measuring